




Mechaniczna klawiatura RGB KB903L

Instrukcja obsługi

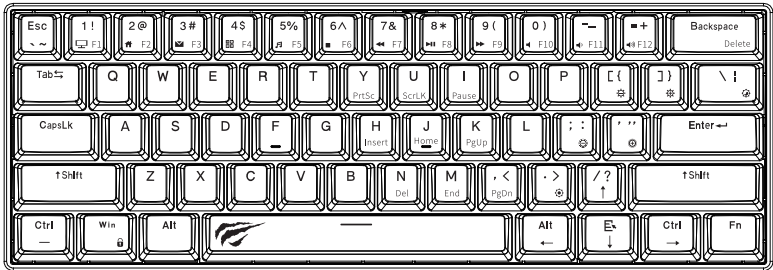

Specyfikacja klawiatury

Typ interfejsu: USB
Wymiary: 291*101*39mm
Liczba klawiszy: 61
Napięcie robocze: 5V±0.25V
Pobór prądu: <200mA
Żywotność klawiszy: 50 milionów kliknięć
Długość kabla: 1800mm
Kompatybilność: Windows 2000/XP/Vista/Win7/Win8/Win10

Podłączanie klawiatury

1. Włącz komputer.
2. Podłącz klawiaturę do portu USB (najlepiej z tyłu obudowy).
3. Poczekaj około minutę – system automatycznie wykryje klawiaturę.

Klawiatura działa na zasadzie plug & play i nie wymaga sterowników.

Skróty klawiszowe

FN+: Zwiększanie jasności podświetlenia, istnieje 6 stopni jasności podświetlenia.

FN+: Zmniejszanie jasności podświetlenia, dostępnych jest 6 stopni jasności podświetlenia, w tym 1 stopień do wyłączenia.

FN+: Zwiększanie prędkości ruchu podświetlenia, dostępnych jest 5 stopni prędkości ruchu podświetlenia.

FN+: Zmniejszanie prędkości ruchu podświetlenia, istnieje 5 stopni prędkości ruchu podświetlenia.

Funkcja klawisza głównego i druga funkcja klawisza złożonego są zamienione

FN+: Naciśnij FN+ jeden raz, aby przełączyć drugą funkcję wszystkich złożonych klawiszy funkcyjnych do stanu aktywnego; naciśnij FN+ ponownie, / / / / te 9 klawiszy, aby przywrócić główną funkcję, a inne

złożone klawisze funkcyjne są nadal dla drugiej funkcji; trzeci raz, aby naciśnąć FN+, aby przywrócić główną funkcję wszystkich złożonych klawiszy funkcyjnych.

Funkcja blokady klawiatury

FN+: Zablokowanie/odblokowanie klawisza Win (klawisz WIN jest zablokowany, gdy podświetlenie jest białe)

FN+: Włączanie/wyłączenie klawiszy strzałek

WIN system operation:

First type							
Shortcut Keys	Function	Shortcut Keys	Function	Shortcut Keys	Function	Shortcut Keys	Function
	1	FN+	F1		Y	FN+	PrtSc
	2	FN+	F2		U	FN+	ScrLk
	3	FN+	F3		I	FN+	Pause
	4	FN+	F4		H	FN+	Insert
	5	FN+	F5		J	FN+	Home
	6	FN+	F6		K	FN+	Del
	7	FN+	F7		N	FN+	PgUp
	8	FN+	F8		M	FN+	End
	9	FN+	F9		.	FN+	PgDn
	0	FN+	F10		+	FN+	-
	-	FN+	F11		B	FN+	Menu
	=	FN+	F12		A	FN+	Alt
	Backspace	FN+	Delete		+	FN+	Ctrl

Second type							
Shortcut Keys	Function	Shortcut Keys	Function	Shortcut Keys	Function	Shortcut Keys	Function
	F1	FN+	My computer		PrtSc	FN+	Y
	F2	FN+	Web/Home		ScrLk	FN+	U
	F3	FN+	Email		Pause	FN+	I
	F4	FN+	Calculator		Insert	FN+	H
	F5	FN+	Music player		Home	FN+	J
	F6	FN+	Stop		PgUp	FN+	K
	F7	FN+	Previous		Del	FN+	N
	F8	FN+	Play/Pause		End	FN+	M
	F9	FN+	Next		PgDn	FN+	.
	F10	FN+	Mute		+	FN+	-
	F11	FN+	Volume -		+	FN+	Menu
	F12	FN+	Volume +		+	FN+	Alt
	Backspace	FN+	Delete		+	FN+	Ctrl

HAVIT

Third type							
Shortcut Keys	Function	Shortcut Keys	Function	Shortcut Keys	Function	Shortcut Keys	Function
	F1	FN+	My computer		Y	FN+	PrtSc
	F2	FN+	Web/Home		ScrLk	FN+	U
	F3	FN+	Email		I	FN+	Pause
	F4	FN+	Calculator		H	FN+	Insert
	F5	FN+	Music player		J	FN+	Home
	F6	FN+	Stop		K	FN+	PgUp
	F7	FN+	Previous		N	FN+	Del
	F8	FN+	Play/Pause		M	FN+	End
	F9	FN+	Next		.	FN+	PgDn
	F10	FN+	Mute		+	FN+	-
	F11	FN+	Volume -		+	FN+	Menu
	F12	FN+	Volume +		+	FN+	Alt
	Backspace	FN+	Delete		+	FN+	Ctrl

MAC system operation:(The first operation of the MAC system is the same as the WIN system)

Second type							
Shortcut Keys	Function	Shortcut Keys	Function	Shortcut Keys	Function	Shortcut Keys	Function
	F1	FN+	Screen brightness reduction		PrtSc	FN+	Y
	F2	FN+	Screen brightness plus		ScrLk	FN+	U
	F3	FN+	Move the beginning of the file		Pause	FN+	I
	F4	FN+	Back to the desktop		Insert	FN+	H
	F5	FN+	Backlit brightness decreasing		Home	FN+	J
	F6	FN+	Backlit brightness increasing		PgUp	FN+	K
	F7	FN+	Previous		Del	FN+	N
	F8	FN+	Play/Pause		End	FN+	M
	F9	FN+	Next		PgDn	FN+	.
	F10	FN+	Mute		+	FN+	-
	F11	FN+	Volume -		+	FN+	Menu
	F12	FN+	Volume +		+	FN+	Alt
	Backspace	FN+	Delete		+	FN+	Ctrl

Third type							
Shortcut Keys	Function	Shortcut Keys	Function	Shortcut Keys	Function	Shortcut Keys	Function
	F1	FN+	Screen brightness reduction		Y	FN+	PrtSc
	F2	FN+	Screen brightness plus		U	FN+	ScrLk
	F3	FN+	Move the beginning of the file		I	FN+	Pause
	F4	FN+	Back to the desktop		H	FN+	Insert
	F5	FN+	Backlit brightness decreasing		J	FN+	Home
	F6	FN+	Backlit brightness increasing		K	FN+	PgUp
	F7	FN+	Previous		N	FN+	Del
	F8	FN+	Play/Pause		M	FN+	End
	F9	FN+	Next		.	FN+	PgDn
	F10	FN+	Mute		+	FN+	-
	F11	FN+	Volume -		+	FN+	Menu
	F12	FN+	Volume +		+	FN+	Alt
	Backspace	FN+	Delete		+	FN+	Ctrl

Obsługa systemu WIN:

Rozwiązywanie problemów

1. Podłącz Klawiaturę do innego portu USB.
2. Jeśli używasz huba USB, spróbuj podłączyć klawiaturę bezpośrednio do komputera.
3. Sprawdź czy port USB nie jest zabrudzony.
4. Odłącz i ponownie podłącz klawiaturę.
5. Uruchom ponownie komputer.

Uwaga

- 1.Sterownik obsługuje rytm muzyczny (klawiatura i komputer pasują do siebie, w sterowniku ustawionym na tryb rytmu muzycznego, światła klawiatury będą poruszać się w rytm muzyki w komputerze)
2. model oprogramowania sterownika to „KB903L”